


# CC501H WIRING DETAIL

---

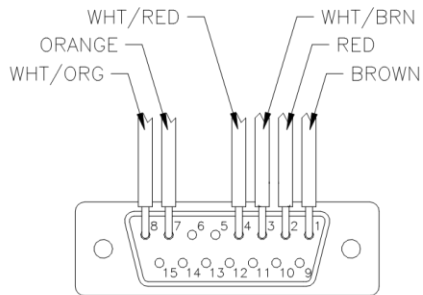

## CC501H CABLE

SHIELD = SHELL GND

|       |   |             |       |
|-------|---|-------------|-------|
| PR #1 | < | BROWN = 1   | TEC+  |
|       |   | WHT/BRN = 3 | TEC-  |
| PR #2 | < | RED = 2     | TEC+  |
|       |   | WHT/RED = 4 | TEC-  |
| PR #3 | < | ORANGE = 7  | SNSR+ |
|       |   | WHT/ORG = 8 | SNSR- |

## ABBREVIATION EXPLANATIONS:

---

TEC+ Thermoelectric Cooler Module Positive Terminal  
TEC- Thermoelectric Cooler Module Negative Terminal  
SNSR+ Temperature Sensor Positive Terminal  
SNSR- Temperature Sensor Negative Terminal

---

### TEC+

1. Brown
2. Red

### TEC-

3. White/Brown
4. White/Red